



Installation & Operation Manual



ONBOARD LOAD SCALE
EXTERIOR DIGITAL | 201-EBT-04B



Thank you for choosing to drive more and scale less! Here at Right Weigh, we are committed to making our products simple to install and easy to use. We understand that installation can vary between vehicles and yours may not be described in this manual. In any event, our technical support team is ready to answer your questions!



(503) 628-0838

(888) 818-2058 - Toll Free (USA ONLY)

+61 418 622840 - Australia & New Zealand



support@rwls.com

leigh@rwlsau.com.au - Australia & New Zealand




www.rwls.com/how-to-calibrate-install/

www.rightweigh.com.au - Australia & New Zealand

FOLLOW US!



Specifications & Overview	4
Scale Installation and Electrical Connections	6
Scale Operating Modes	9
Sensor Average + Estimated Steer Mode	10
Multiple Calibration Mode	10
Calibration	11
Operating & Weighing	13
Security PIN Code	14
Setting	14
Changing	15
Overweight Warning	16
Right Weigh Bluetooth™ App	17
General Information	17
Connecting To Gauge	19
Details Screen	21
Settings Screen	22
Troubleshooting	23
Appendix A - Additional Parts	25
Appendix B - Wiring Insulation	26
Warranty Statement	27

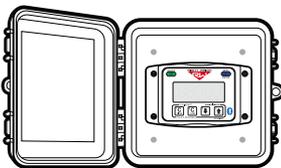

ONBOARD LOAD SCALE
EXTERIOR DIGITAL | 201-EBT-04B



SPECIFICATIONS & OVERVIEW



The Right Weigh 201-EBT-04B digital load scale has four internal air pressure sensors. This scale can monitor a tandem axle air suspension drive group where all 4 air bags can have differing pressures. The 4 pressures are averaged together so that a weight can be properly calculated. The scale can also be used to monitor 4 separate axle groups with 1 height control valve each.

Technical Specifications

Operating Temperature: -22° F to +185° F (-30° C to +85° C)



Storage Temperature: -40° F to +185° F (-40° C to +85° C)

Power Requirement: 9 VDC to 32 VDC (Switched)

Units: Pounds (LBS) or Kilograms (KG)

Housing: High impact polycarbonate blend


Display: 0.8" LCD sunlight readable

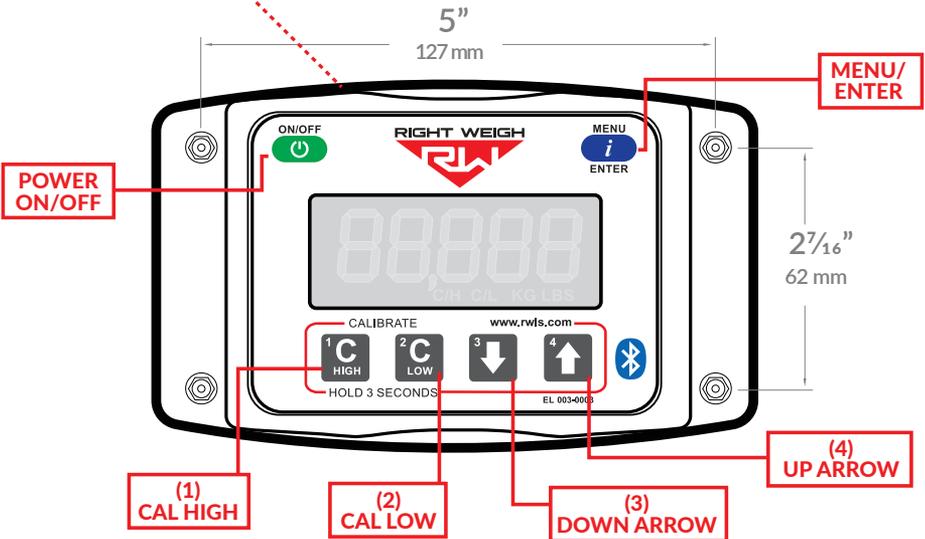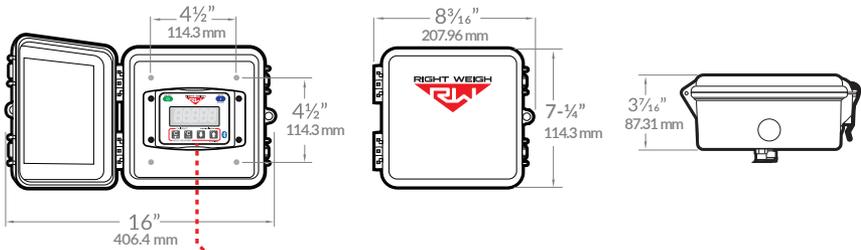

SCALE INSTALLATION & ELECTRICAL CONNECTIONS

The 201-EBT-04B scale is designed to be mounted on the outside of a truck or trailer - a protective box and mounting bracket are included.


The following steps will walk you through how to correctly mount and install the scale. Be sure to choose a location that is easily accessible and safe from potential damage (forklift posts, tire caps, etc.)

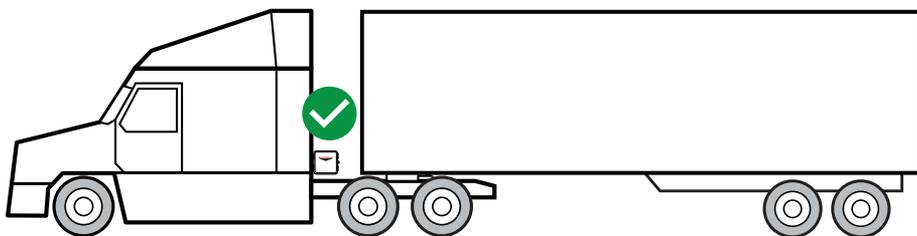

DO NOT mount the scale directly to the chassis or any other main beam unless it is approved by the vehicle manufacturer. Doing so may void the warranty with the vehicle manufacturer.

1 CHOOSE LOCATION

Make sure the location chosen is easily accessible and safe from potential damage (forklift posts, tire caps, etc.). Mount the bracket in the chosen location and install the gauge box to the bracket using supplied hardware.

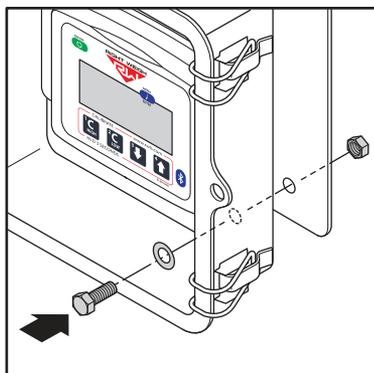

2 DUMP AIR FROM SUSPENSION SYSTEM

Locate and remove the suspension air line fitting from the top of one of the air bags connected to one of the Height Control Valves on the axle group being monitored.


Remove suspension
air line and fitting



3 INSTALL NEW 1/4" AIR LINE

Insert a street tee fitting into the top of the air bag that matches the thread size of the vehicle suspension. Reinstall the suspension air line and fitting into the street tee. Install a new 1/4" air line and fitting to be used with the gauge into the street tee. For more information on the parts needed for air line installation, see Appendix A.

Insert suspension air line and fitting into the tee fitting

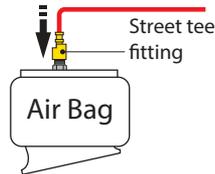

Insert new air line and fitting into the tee fitting




4 ROUTE AIR LINE TO GAUGE

Once the air line has been secured to the gauge, insert it into the correct push-to-connect fitting on the back (A). **DO NOT ROTATE THE AIR FITTING!**

5 REPEAT STEPS 2-4 WITH SECOND, THIRD, AND FOURTH HCV'S

Each air line should go to an air bag connected to each height control valve. If you are measuring a drive axle group with four separate height control valves, see the image to the right. If you are measuring 4 separate axle groups, make sure one air line is connected to each axle group being monitored.

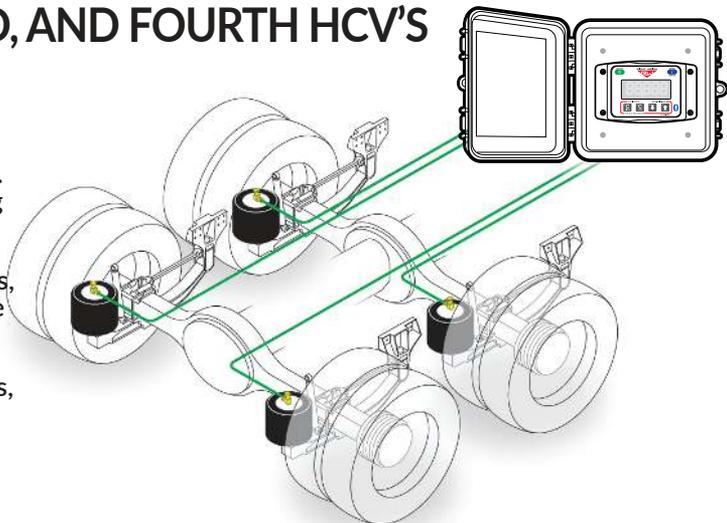


6

AIR UP SUSPENSION AND CHECK FOR LEAKS

7

CONNECT TO POWER AND GROUND

Use wire on the back of the gauge to connect to power and ground. Be sure the RED wire is connected to a SWITCHED positive (+) power source (DO NOT CONNECT DIRECTLY TO BATTERY) and the BLACK wire to chassis ground (-). Supply voltage must be between 9 and 32 volts DC. For more information on wiring connection and insulation, see Appendix B.

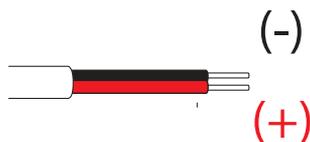

DO NOT connect directly to a battery or any constant power source, gauge should be connected to a switched source so that it can be disconnected from power when not in use. Most users connect the power to vehicle marker lights.

Electrical connections MUST be insulated, see appendix B for instructions.

SCALE OPERATING MODES



The next few pages cover the operation modes that are built into the 201-EBT-04(B). **The load scale can only be setup in one operating mode at a time. If the mode is changed, the calibration data will be reset to factory defaults, requiring re-calibration.**

- **Sensor Average Mode (AVG):** This is the default mode of the scale. It will give you a single weight for the axle group it is attached to.
- **Multiple Calibration Mode (4CAL):** Four sets of calibration data can be stored for use when the axle group is weighed under different conditions, such as when an integrated air ride lift axle is used on the same HCV.
- **Sensor Average + Estimated Steer Mode (S-AVG):** For monitoring the weight of a drive axle group and also calculating an estimated steer axle weight based on the weight ratio between the drive axle group and the steer axle.
- **Independent Mode (IDP):** Inputs are separated for monitoring 4 different axle groups with one height control valve each

CHANGING SCALE MODES



1: With the scale OFF, hold both the UP and DOWN arrow buttons, and press the ON/OFF button. Release all 3 buttons. The scale will display the current mode.

HOLDING



2: Press the UP arrow button to cycle through the configuration modes. To confirm your selection, turn the scale off by pressing the ON/OFF button.

PRESS

SENSOR AVERAGE + ESTIMATED STEER MODE (S-AVG)

In Estimated Steer mode, a 201-EBT-04(B) installed on a tractor drive axle group can also estimate the steer axle weight. In this mode, there is a small number in the lower left of the display - either 1, 2, or 1 & 2 simultaneously - to let you know which axle group is being displayed. Axle group 1 displays the estimated steer axle weight, axle group 2 is the drive axle group weight, and 1 & 2 are the two weights combined.



Use the MENU button to switch the display between the axle groups.



Estimated steer is NOT for straight trucks or anyone who slides their fifth wheel regularly

MULTIPLE CALIBRATION MODE (4CAL)

The 201-EBT-04(B) digital load scale in Multiple Calibration mode (4CAL) can store 4 sets of calibration data. This can be useful for an axle group which has one or more integrated air ride lift axle(s) using the same HCV's, or a suspension which has many operating conditions.



Use the MENU button to switch the display between the different configurations.


INDEPENDENT MODE (IDP)

In Independent mode, a 201-EBT-04B can monitor 4 separate axle groups with one height control valve on each. In this mode, there are small numbers on the bottom left of the display to indicate the axle group being monitored (1, 2, 3, 4, or 1 2 3 4 simultaneously).



Use the MENU button to switch the display between axle groups. Axle group 1 will display the weight associated to sensor A, axle group 2 will display the weight associated with sensor B, axle group 3 will display the weight associated to sensor C, and axle group 4 will display the weight associated with sensor D.

The 201-EBT-04B load scale must be calibrated both empty and loaded to work properly. The scale associates the air pressure in the suspension system to the weight you enter at the time of calibration. You will need to calibrate once while the vehicle is empty, and again while the vehicle is loaded for each axle group being monitored.

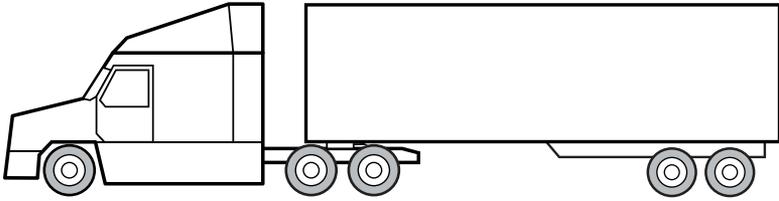

STEER AXLE

**DRIVE AXLE
GROUP
(4 HCV)**



Only enter on-the-ground weight of axle or group being monitored. **DO NOT** use gross weight, tare weight, etc.

Follow calibration steps on the next page, once these are complete the gauge will be ready to use!

CHANGING UNITS

With the gauge on, hold the UP ARROW and then press the MENU button. This will toggle the settings between pounds and kilograms.



+



EMPTY CALIBRATION POINT

1: While the vehicle is empty, obtain axle group weights from a certified in-ground scale.

2: Park on a level surface. Shift the transmission to neutral and set the parking brakes. Chock the wheels to prevent unexpected vehicle movement, then release the parking and service brakes.

3: Make sure the Height Control Valve (HCV) has fully inflated the air bags. If needed, briefly dump the air from the suspension and allow the HCV to refill the system.



4: Press the ON/OFF button to turn on the Right Weigh load scale.



5: For S-AVG, 4CAL, and IDP modes, press the blue MENU button to select the proper axle group or calibration set.



6: Press and hold the C LOW button until the "C/L" symbol appears.



7: Adjust the value using the UP and DOWN arrows so that it matches your scale ticket for the axle group.



8: To save, press and hold the C LOW button until the "C/L" symbol disappears.

9: Repeat steps 5-8 for all axle groups or calibration sets.

LOADED CALIBRATION POINT



Repeat "empty calibration point" steps 1-3 with the vehicle fully loaded



4: Press the ON/OFF button to turn on the Right Weigh load scale.



5: For S-AVG, 4CAL, and IDP modes, press the blue MENU button to select the proper axle group or calibration set.



6: Press and hold the C HIGH button until the "C/H" symbol appears.



7: Adjust the value using the UP and DOWN arrows so that it matches your scale ticket for the axle group.



8: To save, press and hold the C HIGH button until the "C/H" symbol disappears.

9: Repeat steps 5-8 for all axle groups or calibration sets.

Follow these steps while weighing your vehicle:

1: Park on a level surface. Shift the transmission to neutral and set the parking brakes.

2: Chock the wheels to prevent unexpected vehicle movement, then release the parking and service brakes.

3: Make sure the Height Control Valve (HCV) has fully inflated the air bags. If needed, briefly dump the air from the suspension and allow the HCV to refill the system. (This may take several minutes depending on the type of HCV.)



4: Press the ON/OFF button to turn on the Right Weigh load scale.

5: Adjust the suspension or the load itself until the Right Weigh load scale displays a weight value below your legal limit.



6: For S-AVG and 4CAL, press the blue MENU button. Repeat for drive axle group or other configurations.




7: Press the ON/OFF button to turn off the Right Weigh load scale.

SETTING SECURITY PIN CODE



Adding a security PIN will prevent tampering with the gauge. Once set, the PIN will be required to change calibration data and to change the PIN code.

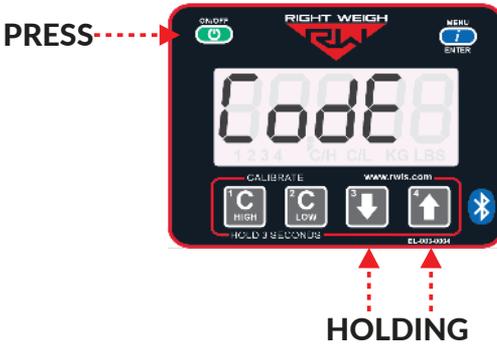


With the gauge off, hold both the C LOW and C HIGH buttons, then press the ON/OFF button and release all three.



Press the MENU button and "00000" will display on the screen. Enter a 5 digit PIN code using the 1, 2, 3, and 4 buttons. Press the MENU button again to save the code.

If the display shows "-----", then there is already a code set. See next page to change existing PIN code

With the gauge off, hold both the C LOW and C HIGH buttons, then press the ON/OFF button and release all three.

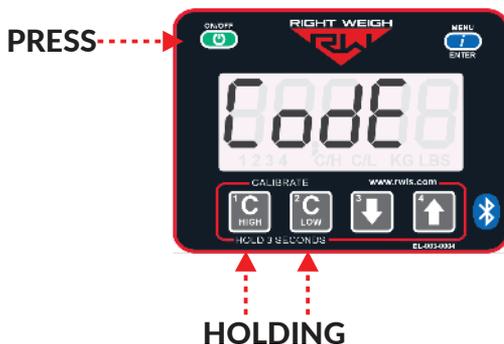

Press the MENU button and “-----” will display on the screen. Enter the previous PIN code. If the code entered is correct, the display will show “Good”.



Press the MENU button and enter the new 5-digit PIN code using the 1, 2, 3, and 4 buttons. Press the MENU button again to save the code.



The overweight warning can be added as a visual warning to the driver to flash anytime the gauge reads above a set weight.



HOLD

With the scale turned on, press and hold both the C HIGH and C LOW buttons until the “C/H” symbol appears.



The default display will show “0”. Setting this to “0” will turn off the overweight feature.



HOLD TO SAVE

ADJUST


Use the UP and DOWN arrows to set the desired warning weight. Press and hold the C HIGH and C LOW buttons to save.



Setting the warning value to “0” will disable the overweight warning feature

RIGHT WEIGH LOAD SCALES APP

Go to the Google Play or App Store and download the Right Weigh Load Scales App!

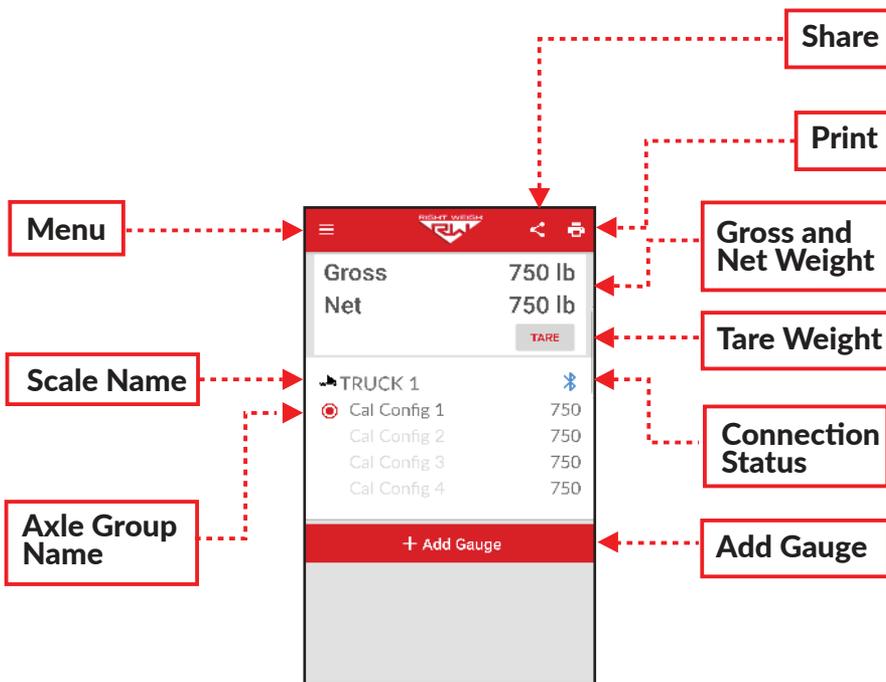

MENU

The menu button will give you the option of displaying your weight data (storage frequency dependent on save settings), seeing the app settings, and will take you to a support page for more information on how to contact Right Weigh, Inc.

SHARE

The share icon will allow you to send your weight data via email or text message.

PRINT

The print icon will allow you to print a weight receipt to most Bluetooth "POS" receipt printers with your weight data and location on it.

GROSS AND NET WEIGHT

Here you can see your gross weight and net weight. Gross weight is the total weight of all axle group readings from the gauge and the net weight can be zeroed by pressing the "TARE" button.

SCALE NAME

Once you have connected the gauge to your phone app, the gauge name (unique identifier) will display here. Clicking on the gauge name will send you to a details page with more information on the gauge status.

AXLE GROUP NAME

These names represent the axle group the gauge is monitoring and is dependent on the set-up of the gauge itself.

TARE

Pressing the "TARE" button will zero the net weight. This can be done to see how much load you are carrying by pressing this button before loading up the vehicle. All axle groups must be monitored for a correct gross or net weight.

CONNECTION STATUS

A blue icon means the gauge is connected. If the icon is gray, the scale has been disconnected or is out of range and pressing the refresh icon will allow the app to attempt to reconnect.


ADD GAUGE

Once your gauge has been connected to power, you can click the "+ Add Gauge" button to find each gauge on your vehicle.

1

With the gauge off, hold down the MENU button, press the ON/OFF button, and release both simultaneously.

PRESS

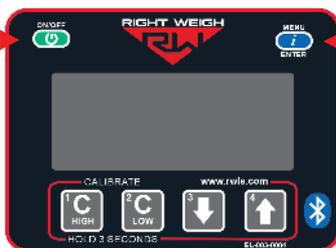

HOLD

2


Press the MENU button twice to see the unique identifier.



PRESS
x2


3

Once the app has been downloaded and opened, you will see the home screen with no gauge connected to it and a gross weight of "0".

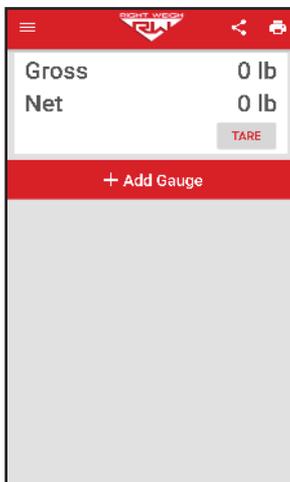

4

On the app home screen, press the “Add Gauge” button on the bottom right and choose whether or not the gauge is connected to the truck or trailer.

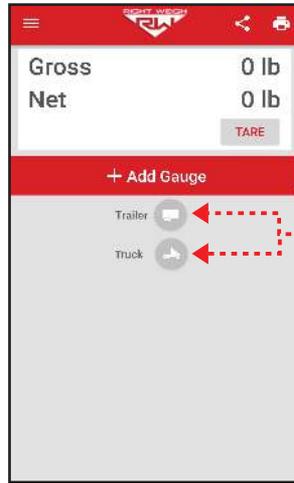


PRESS

CHOOSE

5

Select the gauge that matches the unique identifier name from step 3 to add the gauge to your home screen.

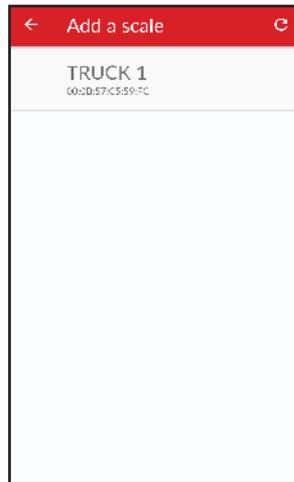

SELECT

To get to the scale details screen, press on the scale name from the home page. This page will display information for that specific scale and includes the ability to rename the scale.

RENAME THE SCALE

To re-name the scale, select the pencil icon to the right. When finished, press "OK" to save. If the name doesn't change, try deleting the scale and re-adding it on the app

SCALE INFORMATION


Under the scale name, you can find the scale's unique identifier, firmware version, and Bluetooth version

WARNING AND OVERLOAD WEIGHTS


These weights are typically set in the "Settings" menu on the app but can be overwritten for each scale individually

RAW SENSOR INFORMATION

Here you can find the psi value for each air sensor. Weight information will also be displayed below these values

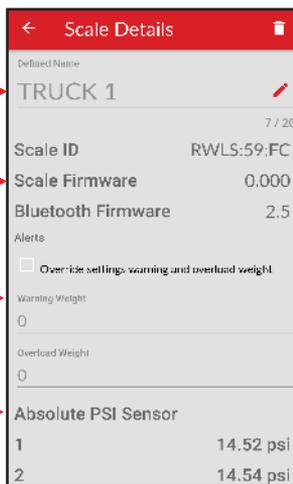

To get to the settings screen, press the menu button on the top left of the home screen and navigate to "Settings"

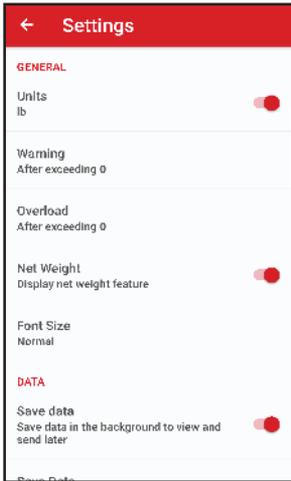

CHANGING UNITS

Change the units to either pounds (LB) or kilograms (KG)


SET WARNING AND OVERLOAD WEIGHTS

Set warning and overload weight limit defaults

NET WEIGHT

Toggle the net weight feature on/off. The net weight feature allows the user to "0" the gross weight shown and can be useful to track how much your total monitored axles have changed since you last pressed "TARE".

Pressing "TARE" does not affect calibration and can be pressed anytime

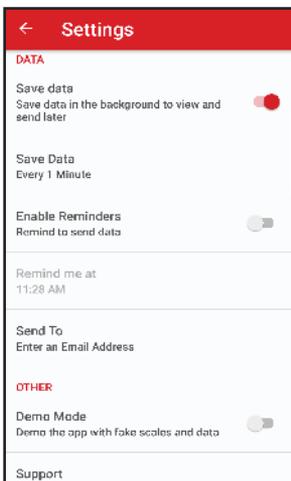

DATA SAVING

Specify data saving and where to send the information to

DEMO MODE

Turn on demo mode to see all the app features without connecting to a gauge

PROBLEM WITH THE GAUGE?

Below is a list of problems we have seen with a simple fix. If you don't see your problem listed here or our troubleshooting doesn't fix your problem, call Right Weigh Tech Support listed on page 2 for further assistance!

ERRATIC / INACCURATE READINGS

The vehicle is not parked on a level surface:

Parking on sloped or banked surfaces will cause the vehicle weight distribution to shift between the axle groups.

The vehicle's brakes are on:

When the vehicle brakes are set, they could apply additional pressure or torque on the suspension airbags. This will cause the suspension to have a different air pressure than what is actually needed to hold up the given weight.

The vehicle is parked on an uneven or rough surface:

If one or more of the vehicle's wheels are in a pothole, that could result in additional pressure or torque on the suspension airbags. This will cause the suspension to have a different air pressure than what is actually needed to hold up the given weight.

There is a significant air leak in the suspension system:

This could cause the HCV to refill the suspension at regular intervals to maintain the vehicle's ride height. If there is a significant leak, the gauge display will slowly decrease in value and then quickly increase in value when the HCV refills the suspension system.

The Height Control Valve (HCV) is malfunctioning or broken:

If the HCV is not functioning correctly, the air pressure applied to the suspension system could be inconsistent and/or erratic. To test for an HCV problem, acquire a weight reading from the Right Weigh gauge and write it down (refer to gauge operating instructions for proper procedure). Drive the vehicle around the block and return to the same location. Acquire a second reading from the Right Weigh gauge. If the two readings are significantly different, then the HCV might be malfunctioning.

SCALE DISPLAY IS BLINKING

Current weight is above the alarm limit programmed by the user:

With scale on, press and hold the 1 & 2 buttons simultaneously. The display will show the alarm limit weight. To remove the alarm weight, set this number to 0 using the down arrow, and then hold 1 & 2 again until the display is cleared.

APP WON'T CONNECT TO THE GAUGE

Scale is connected to a constant power source:

The gauge should never be connected to a constant power source, rewire so that it is connected to a switched power source. If the gauge is powered too long it can stop transmitting a Bluetooth signal and may need to be disconnected and reconnected to work again.

Scale is already connected to another device:

The scale can only connect to one device at a time

Phone needs to be re-set:

To reset your phone - close the app, turn off Bluetooth, and wait 10 seconds. Then open the app and turn the Bluetooth back on. Try rescanning for the scale. If this still doesn't work, in some cases it is necessary to restart the phone completely.

SCALE DOES NOT POWER ON

Scale is not connected to a switched power source of between 9 and 32 volts:

If there is a bad connection in the circuit which causes voltage to drop below 9 volts, the scale will not power on. Test the power source with a voltmeter.

Scale connected directly to battery:

The scale is active anytime it is connected to power, even if the display is off. To reset it, disconnect and reconnect the power source, wait 10 seconds, then try again to turn the display on.

Polarity is incorrect:

The red wire must be connected to positive and the black to negative.

CANNOT CHANGE CALIBRATION DATA

The scale has an active user-defined security PIN:


If the scale is protected with a PIN code, the PIN must be entered before calibration data can be changed. The scale will display "CodE" and the previously set 5-digit PIN code must be entered to change the data.

GAUGE WILL NOT CALIBRATE LOW/HIGH

Air pressure in the system is not changing:


To enter low or high cal mode, the gauge must see a measurable change in air pressure. Make sure you calibrate high when the vehicle is near the legal limit and calibrate low when the truck is empty. Also, be sure the air line is connected directly to an air bag NOT the main air supply or brake system.

The following is a list of additional parts needed for one air line installation. This list is just a suggestion and may not be all of the parts needed for your specific vehicle. Check with your Right Weigh dealer for optional installation kits.

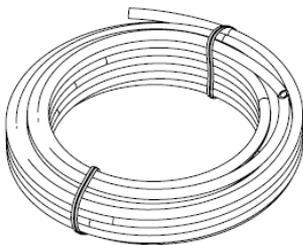


1/4 Inch Air Line

Approximately 20 to 30 feet (6 to 9 meters)

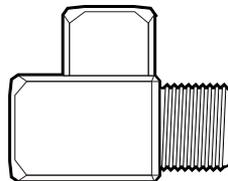


Street Tee Fitting

The thread size should match the air bag fitting. (1/4" NPT or 3/8" NPT)

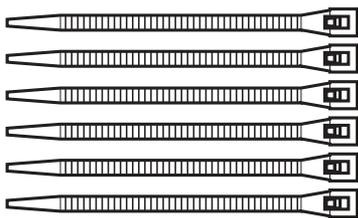

20 or more Zip Ties

 

Male Straight Fitting

Air line fitting for 1/4" air line, with a thread size to match the street tee fitting.

It is very important that all wiring connections be made watertight. Connections which are not watertight can allow moisture to travel through the individual strands of the wires and make it's way into the scale, causing permanent damage to the electronics.

Heat shrinkable splices are included in the 201-SK Installation Kit.



Crimp each end of the wire into the connector with a wire crimp tool (tool not provided).

After crimping and heat shrinking



With a heat gun or heat torch, heat the connector until it shrinks completely around each wire end. Make sure you do not burn the wire jacket.

Add heat shrink



After all connections have been made, heat shrink the entire group of splices so that it seals on the outer jacket of both cables.

After heat shrinking



Right Weigh is committed to providing quality products that function as intended, and we always stand behind our workmanship. Our industry leading warranty is our best effort to express this commitment. Products manufactured or sold by Right Weigh, Inc. are warrantied to be free from significant defects in material and workmanship 3 years from date of purchase. During this time, and within the boundaries set forth in this warranty statement, Right Weigh, Inc. will, at its sole discretion, correct the product problem or replace the product.

This warranty shall not apply to product problems resulting from: (1) Improper application, installation, incorrect wiring, or operation outside of the approved specifications of the product. (2) Accidents, faulty suspension parts or power surges (3) Inadequate maintenance or preparation by the buyer or user (4) Abuse, misuse, or unauthorized modification. (5) Acts of God, lightning strike, floods, fire, earthquake, etc.

Right Weigh, Inc. assumes no responsibility or liability for any loss or damages resulting from use of Right Weigh, Inc. products.

In no event shall Right Weigh, Inc. be liable for direct, indirect, special, incidental or consequential damages (including loss of profits or loss of time) resulting from the performance of a Right Weigh, Inc. product. In all cases, Right Weigh, Inc. liability will be limited to the original cost of the product in question. Right Weigh, Inc. reserves the right to make improvements in design, construction, and appearance of products without notice.

Return Policy and Authorization

Before returning any product, please obtain a Return Merchandise Authorization number (RMA#) by calling Customer Service at 503-628-0838 or e-mailing rwls@rwls.com. Include the RMA# and information regarding the reason for the return with the returned product. Shipping costs for returns must be prepaid by the customer. For your protection, items must be carefully packed to prevent damage in shipment and insured against possible damage or loss. Right Weigh, Inc. will not be responsible for damage resulting from careless or insufficient packing or loss in transit.

An RMA# must be obtained by the original purchaser before any product can be returned. Only new, unused products may be returned. Installed, used, damaged, modified or customized products can not be returned for credit. Credit will be issued to the original purchaser after evaluation by Right Weigh, Inc.

Repairs/Replacements

An RMA# must be obtained before any product can be returned. Right Weigh, Inc. will evaluate returned products at no charge. If Right Weigh, Inc. determines that the returned product is under warranty it will repair the product or parts thereof at no charge, or if unrepairable, replace it with the same or functionally equivalent product whenever possible. Right Weigh, Inc. will return the product at its expense via a shipping method (carrier to be at sole discretion of Right Weigh, Inc.) equal to or faster than the method used by the customer. Products or parts thereof not covered by warranty will be repaired or replaced at customer expense upon authorization by the customer. Right Weigh, Inc. will return the repaired product at customer expense via a shipping method (carrier to be at sole discretion of Right Weigh, Inc.) equal to or faster than the method used by the customer.

For additional support contact:

Australia and New Zealand:

Smart Truck Solutions

+61 418 622840

rightweigh.com.au

United States and Canada:

Right Weigh, Inc.

(503) 628-0838

(888) 818-2058 - Toll Free (USA ONLY)

www.rwls.com

support@rwls.com

RIGHT WEIGH



Right Weigh, Inc.
Hillsboro, Oregon USA

PP-003-0034 Revision C

February 2020

©2015-2020 Right Weigh, Inc. All rights reserved.